




Nintendo 3DS 2015 Motherboard Replacement

This guide will show how to replace the motherboard in the 3DS 2015.

Written By: Tyler Starr

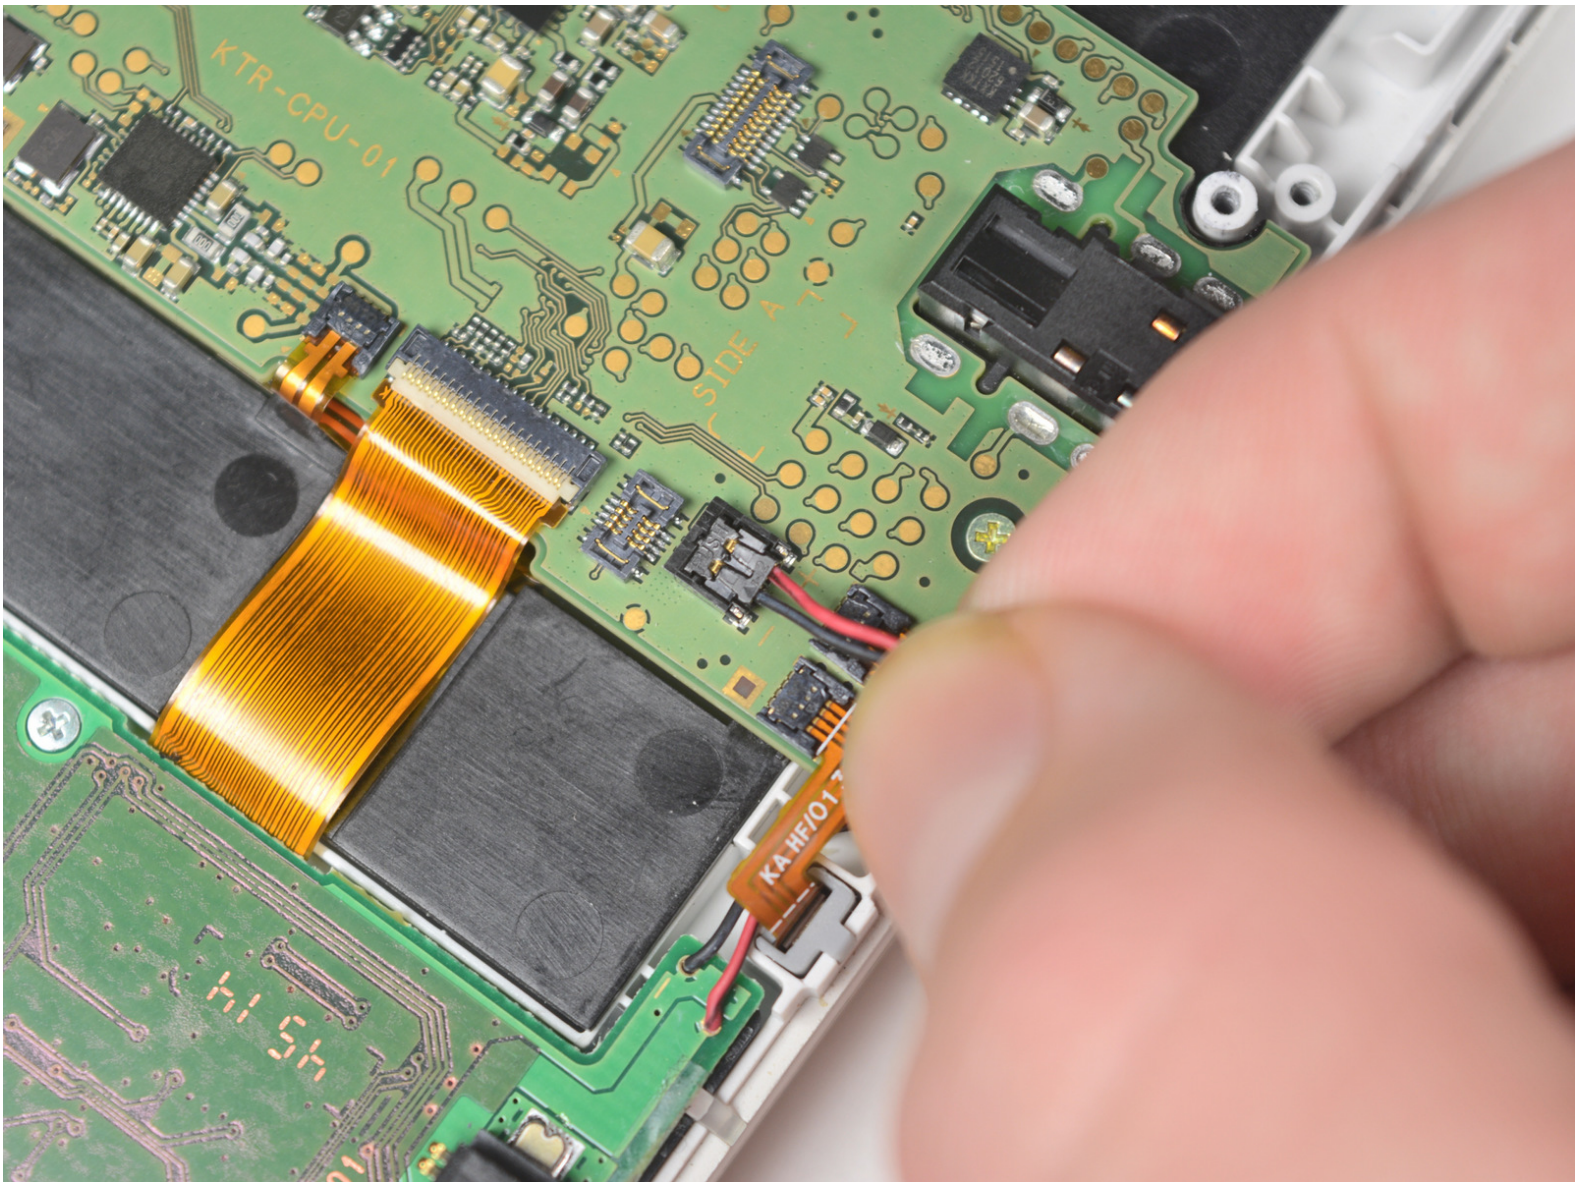

INTRODUCTION


Replacing the motherboard should be a last resort and shouldn't be taken lightly. There are many delicate ribbon cables so be careful and go slow.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tri-point Y0 Screwdriver](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

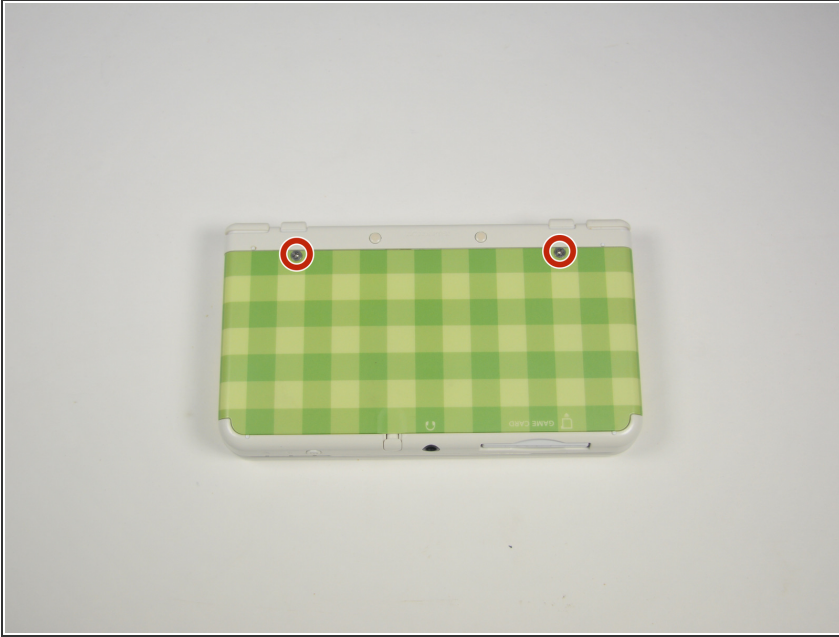

- Unscrew the two 3mm Phillips #0 head screws along the top edge of the device.
- ⚠ The screws on the back panel strip easily. Go slowly and press down firmly.
- ⓘ The screws on the back panel are held in by locking washers, so they won't come out of the back panel.

Step 2

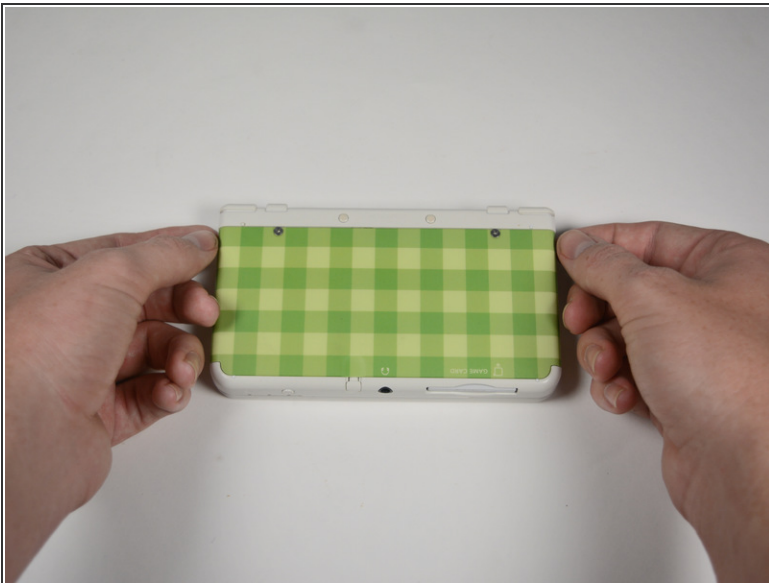

- Pull the top corner tabs of the front face plate outward and towards you.
- Pull the faceplate up and out of the slots at the bottom of the device.
- Set aside the back faceplate.

Step 3



- Insert a plastic opening tool into the notch at the top of the battery.
- Pry the battery up with the plastic opening tool.

Step 4 — SD Card Reader





- Unscrew the three 3mm Y0 screws along the right and bottom of the SD card reader.
- ⓘ The bottom of the SD card reader should slightly pop out after removing the screws.

Step 5






- Pull the SD card reader from the edge with two holes gently to free the tab at the top of the SD card reader.
- ⚠ Don't completely pull the SD card out of the device yet. There is a ribbon cable connected under the SD card reader.
- Reorient the device so that the power jack faces you.

Step 6

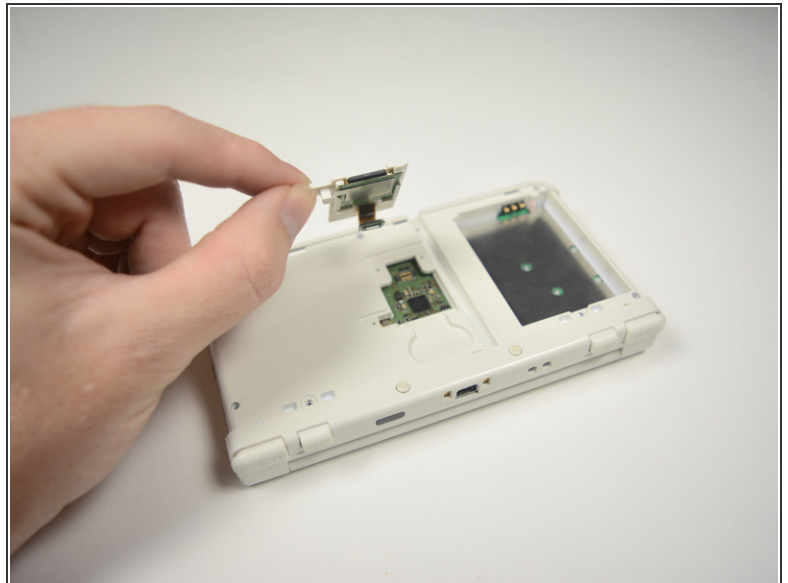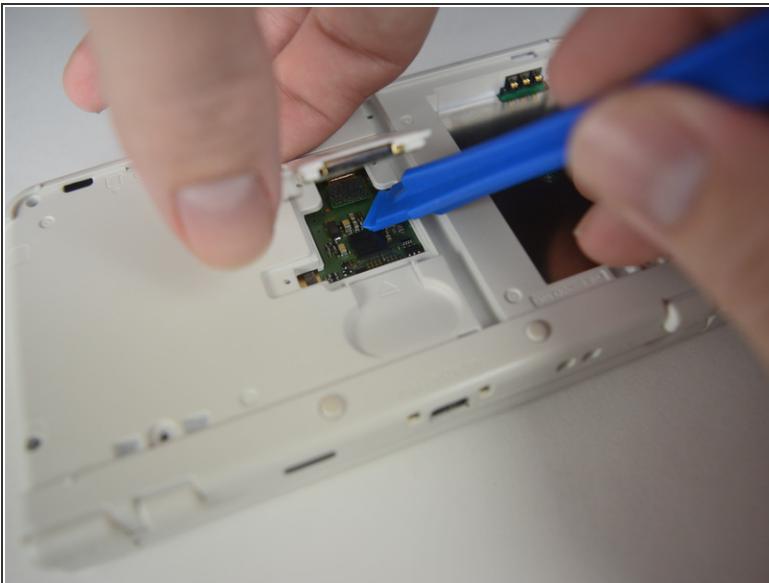


- Lift the SD card reader gently.
- Use a plastic opening tool to pry the SD card ribbon cable off the socket on the motherboard.
- Lift the SD card reader out off of the lower casing.

Step 7 — Lower Case

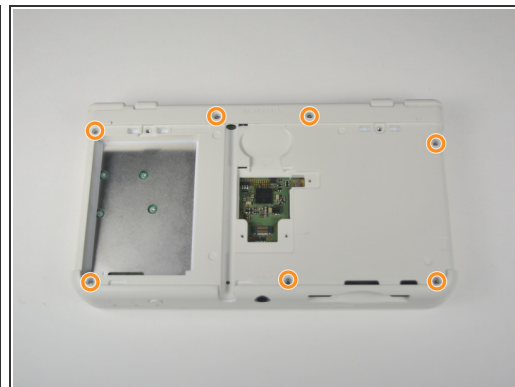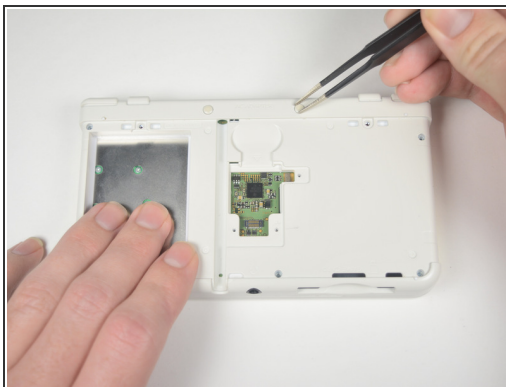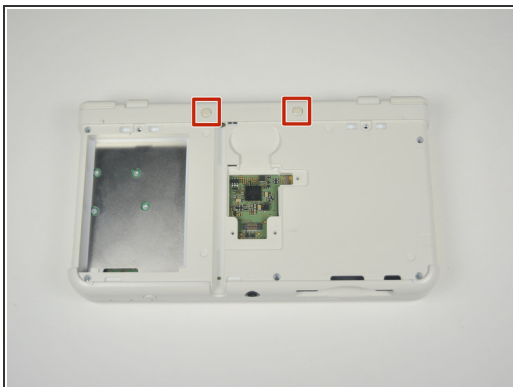


- Reorient the device so that the game slot now faces you.
- Remove the two rubber bumpers along the top of the device using tweezers.
- Unscrew the seven 6mm Phillips #00 screws along the top and bottom of the 3DS.

Step 8

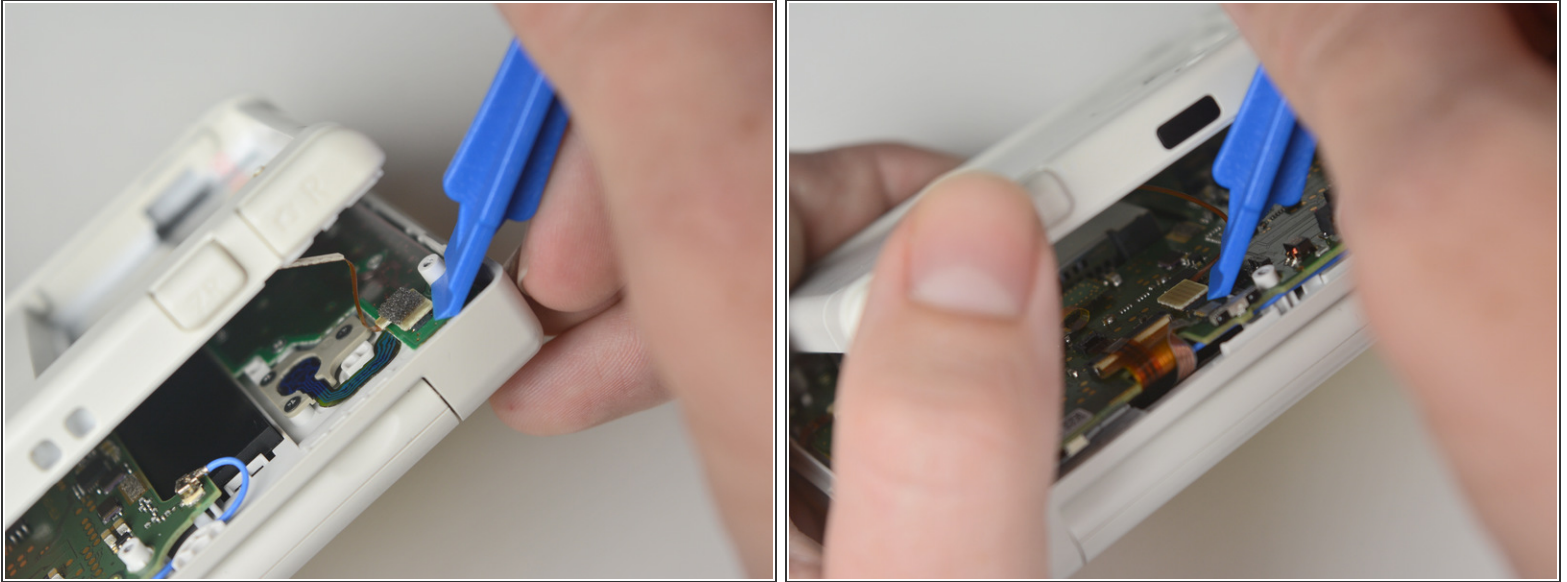


- Lift the top edge of the lower case slightly off on the 3DS.
- ⚠ Don't pull the lower casing completely off, you may break those connections. There are ribbon cables that must be disconnected first.
- Pry the ribbon cable socket under the right trigger using a plastic opening tool.
- Pry the ribbon cable socket under the infrared receiver cover using a plastic opening tool.

Step 9

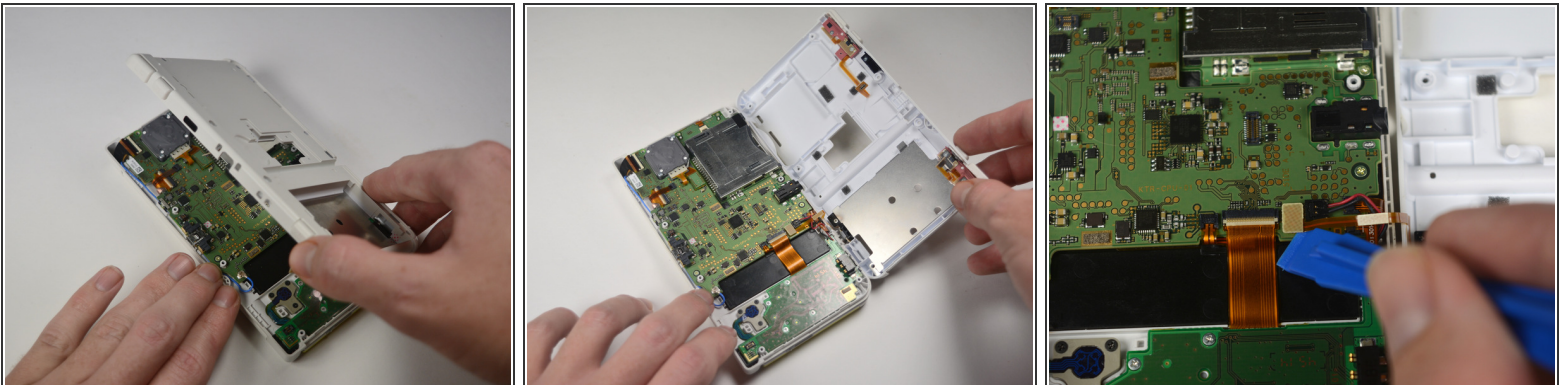


- Open the device slowly from its top edge. Be careful not to tug the ribbon cable connected near the bottom edge of the device.
- Pry the last ribbon cable attached to the lower case using a plastic opening tool.

Step 10 — Joystick

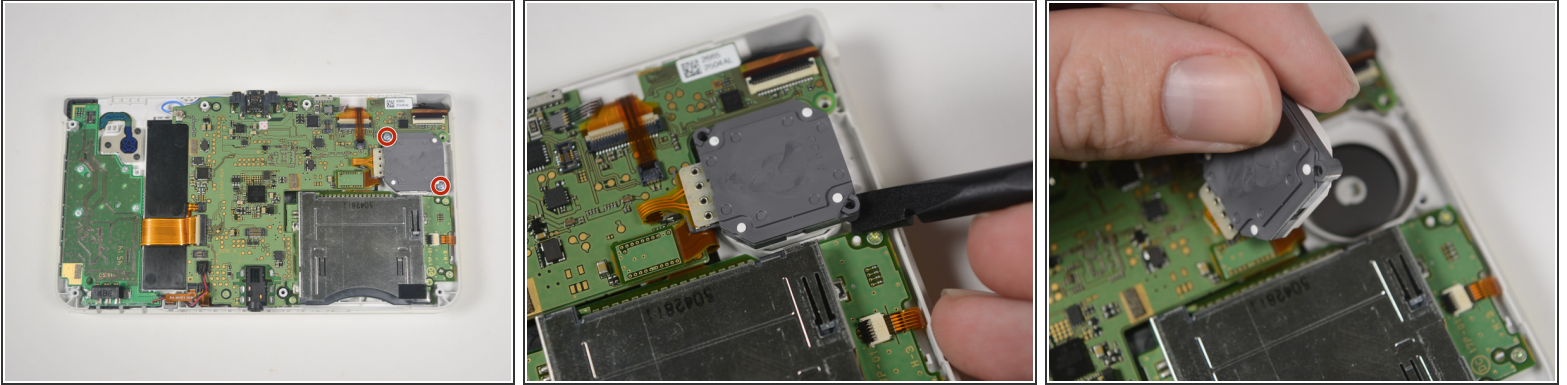


- Locate the joystick assembly near the top right corner of the motherboard.
- Remove the two 8mm Phillips #00 screws from the back of the joystick.
- Use the flat end of the spudger to pry off the joystick pad from its plastic housing.

Step 11

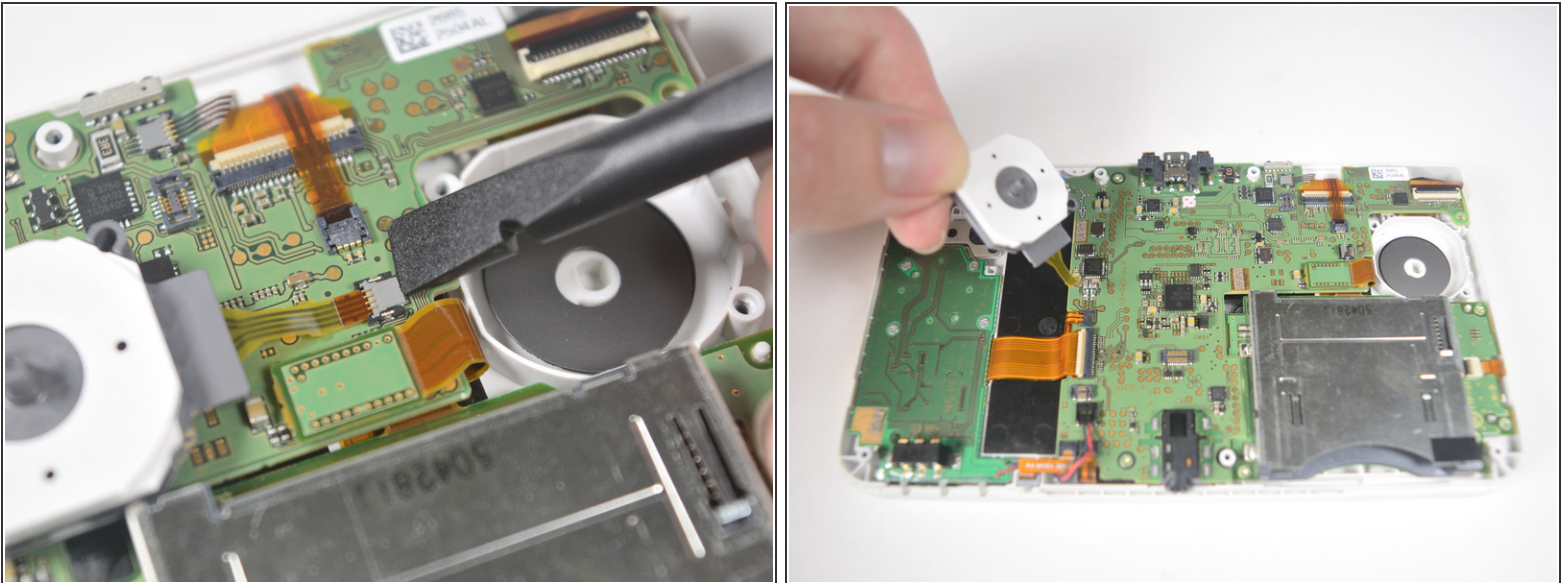

- Lift the joystick pad and place it on its back. This will reveal the ribbon cable connected to the joystick pad.
- Use the flat end of the spudger to pry up the retaining flap for the ribbon cable.
- Lift the joystick out of the device.

Step 12 — Motherboard

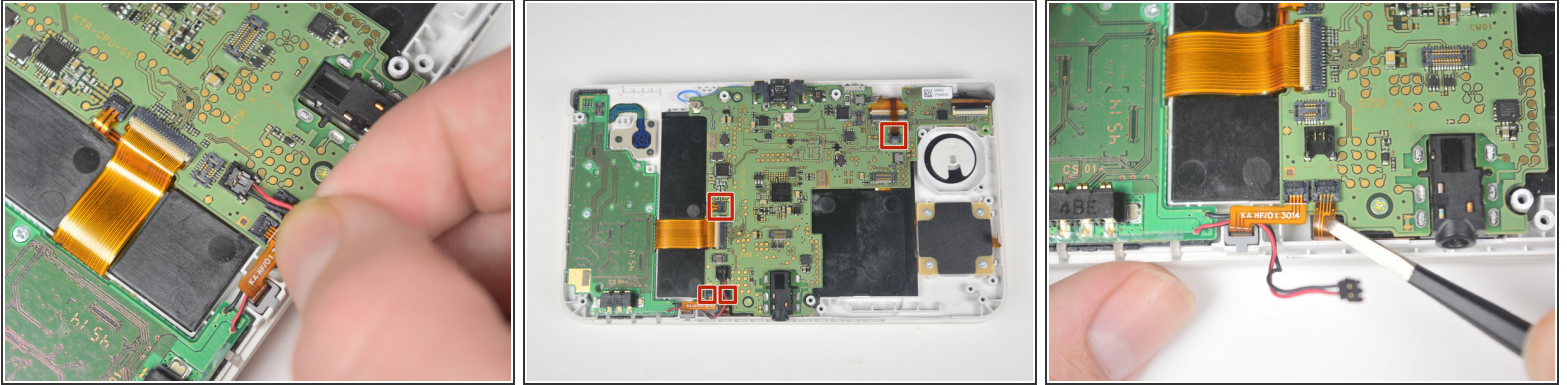


- Remove the power cable, indicated by the black and red wires, by gently pulling it up and out of the connector.
 - Gently pull the ribbon cables out of the 4 ZIF connectors.
- ⚠ Do not lift up on the tabs on these ZIF connectors. Lifting these tabs will break the connectors.

Step 13




- Pull up gently on the blue wifi antenna.
- Pry the retaining tab on the connector behind the infrared receiver and gently pull the ribbon cable from the connector with tweezers.

Step 14

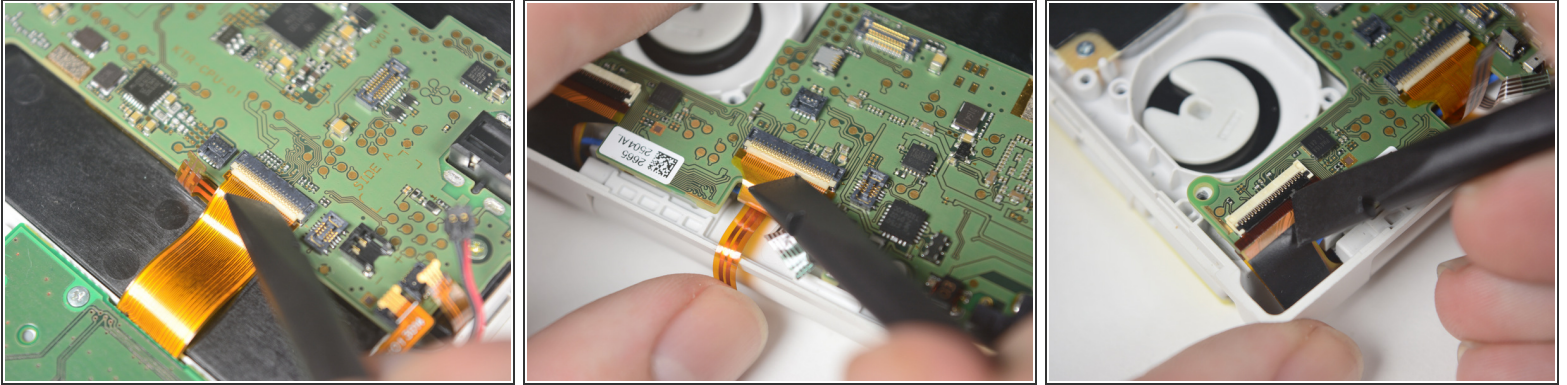

- Lift the retaining tab and remove the large ribbon cable on the left side of the motherboard.
- Lift the retaining tab and remove the large ribbon cable on the top of the motherboard behind the infrared receiver.
- Lift the retaining tab and remove the large ribbon cable on the top of the motherboard just above the joystick housing.

Step 15

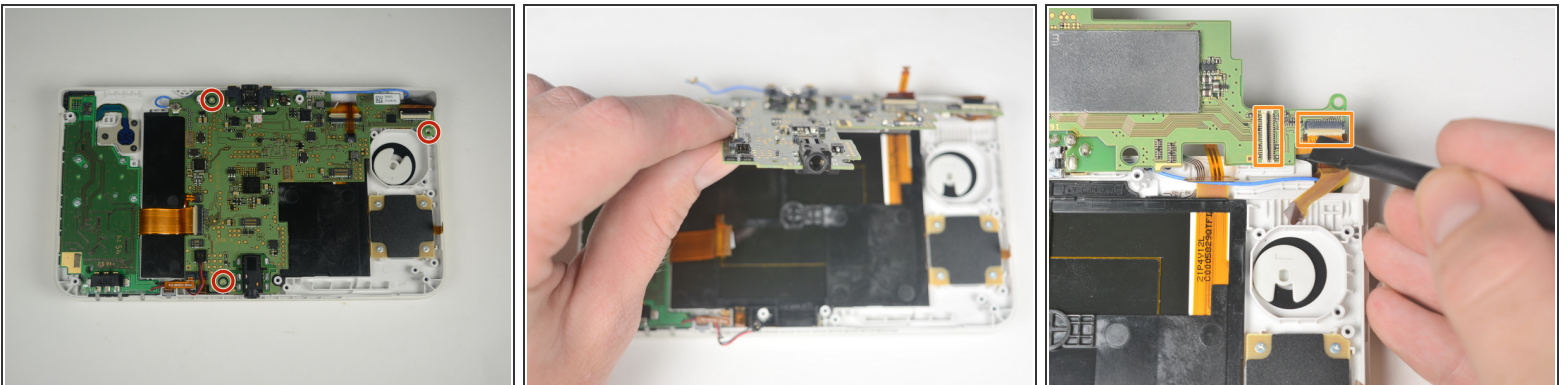

- ⚠ Double check that all motherboard connection on the top of the board have been disconnected.
- Remove the three, 3mm Phillips #00 screws that secure the motherboard to the device housing.
- Lift the motherboard gently by the headphone jack.
- Remove the two ribbons on the back of the device by lifting the retaining tabs on the ZIF connectors.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 08:37:08 AM.